

Code	Description
73874	Volute spring
74424	Start wheel
73776	Drive pawl
73829	Spring,drive arm
73775	Pull rod Assy.,chock
73821	Recoil Starter Assy.
73774	Start rope
73945	Starter handle
73790	Oil seal
73785	Woodruff key
73879	Oil drain plug
73789	Crankcase,seal gasket
73791	Oil Seal(S)20*9.8*7
73792	O-ring
74103	Oil filling plug
73833	O ring
73784	Cylinder gasket comp.
73778	Cylinder cover gasket
73820	Thermostat 60°
74248	Anode
73779	seal Gasket
73780	Caburetor gasket (outlet)
73781	insulation board
73782	Caburetor gasket (in)
73783	Carburetor Assy.
74416	Flying wheel Assy.
74428	Starter pulley

73787	CDI (Charging coil, spark plug lead assy.)
74423	Fuel tank
74405	Fuel line
74404	L type Fuel Drain Hose
73795	Oil ring
73796	2nd ring
73797	1st ring
73794	Steel ring
73898	air Valve oil seal
73899	valve clamp
73900	Rocker arm
73901	Rocker arm bolt
73903	air Valve tappet
74417	Handle Rubber sleeve
74421	Handle
73905	locking segment
74420	Throttle Lever
73818	Throttle cable
73798	Emergency stop switches assy
73911	Lock handle
73812	Flat gasket
73913	Lock handle
74406	Clamp plate
74407	Rivet
74408	Clamping handle
74409	Clamp bolt
73824	O ring
73825	Shift handle
74410	Drain pipe 5*9*245

74411	Seat,handle
74425	Protector
73804	Plug,upper casing
73803	Engine gasket
74247	Anode
73918	Water hose seal ring(lower)
73805	Water pump shell
73806	Seal ring(water pump shell) (33.4*1.9)
73807	Water pump inner shell
73809	Impeller pin
74414	Water Pump Locating Pin
74429	Water Pump Plate
74431	Water Pump Seat
74419	O ring (4.8*3.3)
73814	Seal Gasket
73812	Flat gasket
73817	O ring,lower casing (47.5*3.5)
73815	Oil Seal 22*13*7
73816	Oil Seal 9.8*24*9
73826	Lower Casing Assy.
73944	Starter rope