

Code	Description
73871	Torsional spring,brake
73872	Brake
73873	Brake cable assy.
73874	Volute spring
73828	Start rope $\phi$ 3.5*1800mm
73875	Start wheel
73945	Starter handle
73829	Spring,drive arm
73830	Drive arm
73876	press plate
73864	Recoil Starter Assy
73831	Gasket,crankcase
73785	Woodruff key
73879	Oil drain plug
73790	Oil seal
73832	Oil seal B10.8*21*7
73792	O-ring
74248	Anode
73820	Thermostat 60°
73779	seal Gasket
73833	O ring
73834	Oil dip-stick
73835	Cylinder gasket
73836	Gasket
73837	Air intake manifold gasket(inlet)
73838	Carburetor washer block
73839	Seal Gasket(out),Intake manifold
73840	Carburetor Assy.
73841	CDI (Charging coil, spark plug lead assy.)
73842	Oil seal,Crankshaft
73843	O-ring,fuel pump
73844	Fuel pump assy.
74574	Fuel tank

73864	Recoil Starter Assy
73903	air Valve tappet
73898	air Valve oil seal
73899	valve clamp
73900	Rocker arm
73901	Rocker arm bolt
73846	3rd ring
73847	2nd ring
73848	Top ring
74417	Handle Rubber sleeve
74421	Handle
73906	Resistance adjustment knob
73905	locking segment
74420	Throttle Lever
73849	Throttle cable
73865	Tiller Assy.
73911	Lock handle
73850	Pull rod comp.,chock
73798	emergency stop switches assy
73866	Fuel hose joint assy
73851	Shift handle
73804	Plug,upper casing
73862	Seal gasket
73824	O ring
73915	Angle adjusting pin
73913	Lock handle
73914	Lock screw
74407	Rivet
74408	Clamping handle

74409	Clamp bolt
74406	Clamp plate
74261	Anode
73832	Oil seal B10.8*21*7
73929	Bearing
73918	Water hose seal ring(lower)
73919	Plate,water pump
73852	Water pump housing
73853	Water pump inner housing
74414	Water Pump Locating Pin
73854	Gasket,water pump
73856	Plate,water pump
73930	Bearing
73857	Gasket,water pump base
73812	Flat gasket
73817	O ring,lower casing (47.5*3.5)
73815	Oil Seal 22*13*7
73924	Dog clutch
73859	Stop pin,drive shaft
74247	Anode
73944	starter rope
74177	Fuel Hose With Connector