

Code	Description
73946	Volute spring
73936	Pan head bolt with cross recess
73937	Flat gasket
73941	Start wheel
73938	Drive arm
73939	Spring,drive arm
73940	Return spring
73942	Clip spring
73943	Starter plate
73944	starter rope
73988	throttle cable
73945	Starter handle
73991	Recoil Starter Assy
73993	Trim rod
73994	Orifice plate
74406	Clamp plate
73995	Clamp Bolt,Transom
73996	intensify handle
73997	Bolt
73974	Oil seal,drive shaft
73967	Upper engine gasket

73968	Seal Gasket,water hose
73969	Water pump housing comp.
73970	O ring,water pump casing
73971	Insert, cartridge
73981	Woodruff key
73973	pressing plate,bearing seat
74413	Bearing seat casing
73974	Oil seal,drive shaft
73975	Seal Gasket,bearing seat
73978	oil seal
73979	O ring (big)
73980	O-ring(50.5*3.1)
74249	Anode
73998	lower Unit assembly(S)
73999	lower Unit assembly(L)
73899	valve clamp
73898	air Valve oil seal
73962	piston
73963	oil ring
73964	2nd ring

73965	1st ring
73820	Thermostat 60°
73947	Seal gasket
73948	Cylinder gasket comp.
73949	Seal Gasket,Air flue cover plate
73950	Ignition coil
73951	Woodruff key oil seal
74248	Anode
73952	Fuel pump Assy
73833	O ring
74103	Oil filling plug
73953	Carburetor washer
73954	Plate
73785	Woodruff key
73989	belt
73956	Charging coil
73957	Oil dip stick
73958	CDI
73959	Oil seal
73960	Oil seal
73961	O-ring
73982	oil alarm
73984	Pull rod,choke
73985	pull rod connection, choke
73986	Protecting bush,choke
73866	Fuel hose joint assy

73983	lock handle
74417	Handle Rubber sleeve
74421	Handle
73905	locking segment
74420	Throttle Lever
73798	emergency stop switches assy
73966	Throttle cable
74001	Shift handle
73992	Tiller Assy.
73944	starter rope
74177	Fuel Hose With Connector